


1D Pocket-sized Bluetooth Scanner Keypad Definition

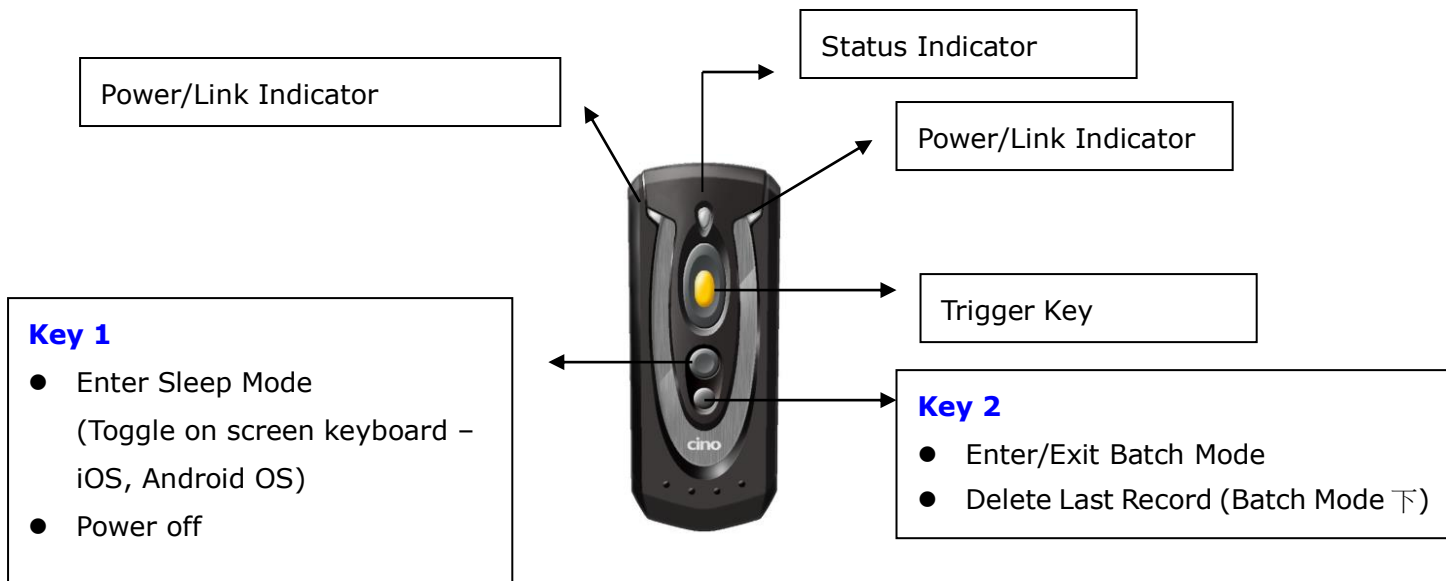

Key 1

A. Enter Sleep mode (Toggle on screen keyboard – iOS, Android OS)

* 行為: 快按兩次, 每次少於1秒.

* 聲音及燈號與Gun Type相同.

B. Power Off

* 行為: Key 1 長按一次, 時間長於3秒.

* 聲音: 4 beeps in descending tone.

* 燈號: 二側Power/Link Indicator 藍燈閃一下與Status Indicator 紅燈同步閃一下之後熄滅.

Key 2 (一般狀態)

A. Enter/Exit Batch Mode

* 行為: 長按一次, 時間長於3秒.

* 聲音: 3 beeps (與掃quick set一樣的聲音)

* 燈號與Gun Type相同

Key 2 (Batch Mode下)

- * Delete last record
- * 行為: 快按兩次, 每次少於1秒.
- * 聲音與燈號和Gun Type相同

Trigger Key

A. Trigger

B. Wake up from sleep mode

- * 行為: 按一下
- * 聲音及燈號與Gun Type相同.

C. Power-on

- * 行為: 按一下
- * 聲音: 4 beeps in descending tone.
- * 燈號: 兩側Power/Link Indicator 藍燈閃一下與Status Indicator 綠燈同步閃一下之後熄滅 (按下按鍵之後, 先看到燈號, 接著beeping聲響)

Pairing

將 “uninstall” 的 scanner 放上 cradle 之後, 按 Trigger 按鍵 3 秒鐘後開始進行 pairing.

* 以下為 Gun Type 的 Indication

Descriptions	Link Indicator	Beeper
Radio connected	1 blue blink per 2.5 sec.	Off
Radio disconnected	3 blue blinks per 2 sec.	Off
During connection	Quick blue blinks	Short clicks
Radio connection built	1 blue blink per 2.5 sec.	4 beeps in ascending tone
Radio connection lost	3 blue blinks per 2 sec.	4 beeps in descending tone
Data Transmission	Quick blue blink	Short clicks
Descriptions	Status Indicator	Beeper
Under charging (on cradle)	Steady red	Off
Fully charged (on cradle)	1 green blink at regular interval	Off
Under batch scanning	1 green blink per 2.5 sec.	Off
Pair failure	Steady red	2 Di-do Di-do beeps
Out of memory	2 red blinks	2 long beeps
Battery power low	1 red blink at regular interval	1 beep at regular interval
Battery power extremely low	8 red blinks	8 beeps
Good read	1 green blink	1 good read beep
Under Configuration	Steady red	Off
Uninstall state	Alternative red and green blinks	Off
Upgrade state	Steady red	Short click
Time out warning	Off	3 long beeps
Paged by smart cradle	Off	6 page beeps
Sleep state / Battery no power	Off	Off